



Usage of the product:

The Collar or flashing sealant is used to stop the water from penetrating the junction of the flue with the flashing. Complete of steel screws to be well fixed on the flue.

Installation instructions:

Once fixed above the flashing, seal properly the junction of the flue with the collar. Installation of the chimney cap must be carried out by qualified personnel.

STAINLESS
STEEL



COPPER



Art. 3030



| ø | 80 | 100 | 120 | 130 | 140 | 150 | 160 | 180 | 200 | 220 | 250 | 300 | 350 | 400 |
|---|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| H | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 |
| A | 180 | 200 | 220 | 230 | 240 | 250 | 260 | 280 | 300 | 320 | 350 | 400 | 450 | 500 |