


NEW

FLUE PIPE CAP

ART. 4010

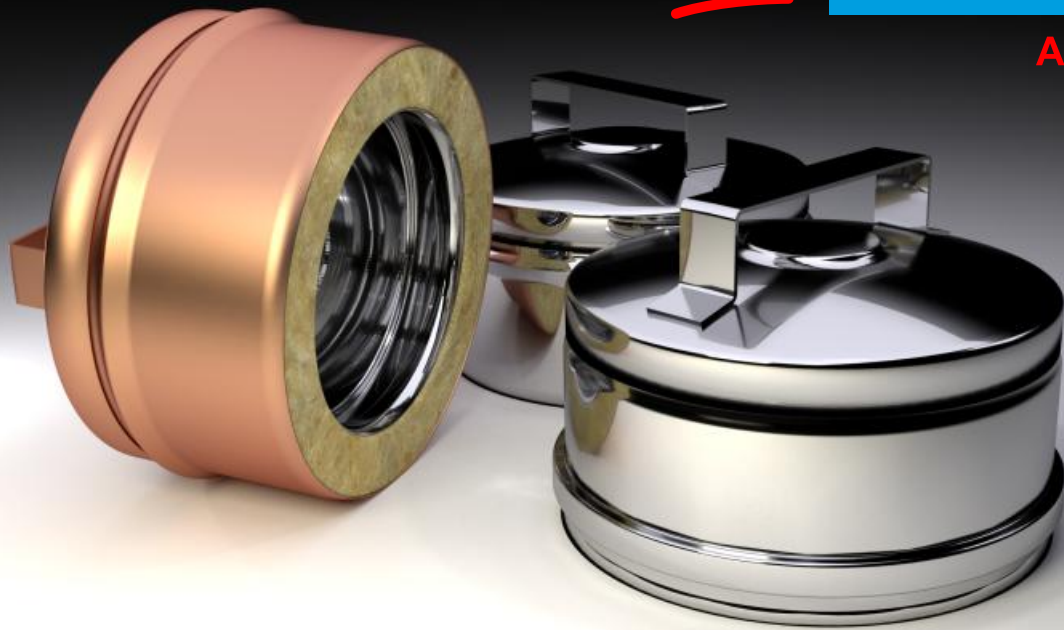

Usage of the product:

The flue pipe cap is a component used at the base of the stack pipe when there is no need of draining moisture or rainwater, also when it is not necessary to remove ash buildup deposits derived from pellets or wood fumes that might then ignite dangerous soot fire.

Installation instructions:

It is inserted under a T-connector at 90° or 135°, flue pipe and duct, wall bracket or loft stand. It may be used as a manifold end cap or for a pipe/chimney/conduit in order for it to be blocked or made serviceable. The installation of a pipe hose clamp on the external tube is compulsory. During regular maintenance, ensure that no water is present.

STAINLESS
STEEL



COPPER



single wall - Art. 4010

Ø	80	100	120	130	140	150	160	180	200	220	250	300	350	400	450
H	101	104	106	107	109	110	111	114	116	119	123	129	135	141	147
Hf	84	86	88	89	90	90	90	92	95	96	99	103	107	112	116



double wall - Art. 4010 DP

Ø	80/130	100/150	130/180	150/200	180/230	200/250	250/300	300/350	350/400	400/450
H	107	110	113	116	120	122	128	135	141	147
Hf	88	90	92	95	97	99	103	107	112	116